

NAMES AND FUNCTIONS OF PARTS

Focusing Screen N

Aperture Ring Coupling Pin

This pin is fitted into the Exposure Meter Coupler of the lens, to transmit the aperture data to the AE Prism Finder.

Alignment Dot/Battery Check Lamp

Shutter Release Selector

A white square is used during normal photography. When a red dot is indicated, the shutter is locked, turning power OFF.

When the battery is exhausted, the mechanical shutter can be released at approx. 1/60 second when this selector is aligned with the yellow dot.


Shutter Release Button

Focusing Screen Release Pin

When you want to change the screen, slide this pin to the left and remove the screen.

Mirror

*Never touch the surface of the mirror.

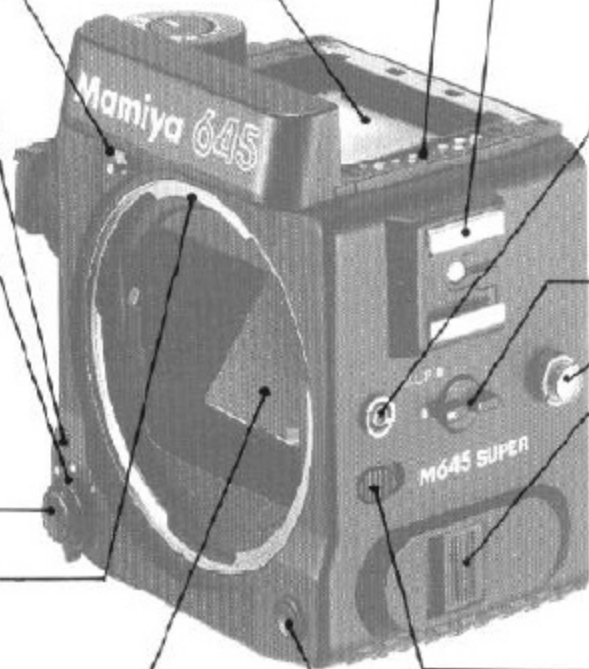

Viewfinder Contact

This electric contact is used to exchange data with AE Prism Finder.

Hot-shoe (X contact)

A cordless flash can be used with this shoe.

Flash Sync Terminal

A flash bulb, flash synchro card and optional synchro terminal adapter can be connected with this terminal.

Mirror Lock-up Lever

Neck Strap Lug

Auxiliary Release Contact

When the cover is moved to the left the contact appears. This contact is used for connections of external releases such as a special hand grip and remote control unit.

Lens Release Button

Battery Check Button

LED displays the present battery condition.